

Wireless 802.11b/g Portable Router

User's Guide

FCC Certifications

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

For product available in the US market, only channel 1~11 can be operated. Selection of other channels is not possible.

The device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

All trademarks and brand names are the property of their respective proprietors.

Specifications are subject to change without prior notification.

Hereby, AboCom, declares that this device is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC.

Table of Content

INTRODUCTION	1
Features	1
Hardware Connection	1
LED Indicators	2
ABOUT THE OPERATION MODES	3
AP Mode	3
GW Mode	3
CONFIGURATION	4
Login	4
Common Connection Types.....	4
Configuration via Web	6
Wireless Mode.....	6
Status.....	16
System Data.....	16
TCP/IP.....	18
Other.....	19
CHAPTER 4: PC CONFIGURATION	20
Overview	20
Windows Clients	20
TCP/IP Settings - Overview.....	20
Checking TCP/IP Settings - Windows 98/ME:.....	21
Checking TCP/IP Settings - Windows NT4.0.....	23
Checking TCP/IP Settings - Windows 2000:.....	27
Checking TCP/IP Settings - Windows XP.....	29
Internet Access.....	31
Macintosh Clients	32
Linux Clients	32
Other Unix Systems	32
Wireless Station Configuration	33
APPENDIX A TROUBLESHOOTING	34
Overview	34
General Problems	34
Internet Access	34
Wireless Access	35
APPENDIX B ABOUT WIRELESS LANS	36
BSS	36
Channels	36
WEP	36
Wireless LAN Configuration	36
Regulatory Approvals	38

Introduction

This is an IEEE802.11b/g compliant 11 Mbps & 54 Mbps Ethernet Wireless Portable Router. The Wireless Portable Router is equipped with two 10/100 M Auto-sensing Ethernet ports for connecting to LAN and also for cascading to next Wireless Portable Router.

This Portable Router provides 64/128bit WEP encryption, WPA and IEEE802.1x which ensures a high level of security to protect users' data and privacy. The MAC Address filter prevents the unauthorized MAC Addresses from accessing your Wireless LAN. Your network security is therefore double assured.


The web-based management utility is provided for easy configuration that your wireless network connection is ensured to be always solid and hassle free.

Features

1. One port for both wireless LAN and WAN
2. Support WPA/WAP2/WPA-PSK/WPA2-PSK/WAP-RADIUS/WPA2-RADIUS
3. Support AP and Gateway modes
4. Automatic channel selection
5. Client access control
6. Support 802.1x/Radius client with EAP-TLS, TKIP, AES encryption
7. Adjustable Tx power, Tx rate, and SSID broadcast
8. Allow WEP 64/128 bit
9. MAC filtering


Hardware Connection

1. Connect the Wireless 802.11b/g Portable Router to a power outlet.
2. Connect one end of the Ethernet cable to the Wireless 802.11b/g Portable Router, the other end to your PC or notebook.

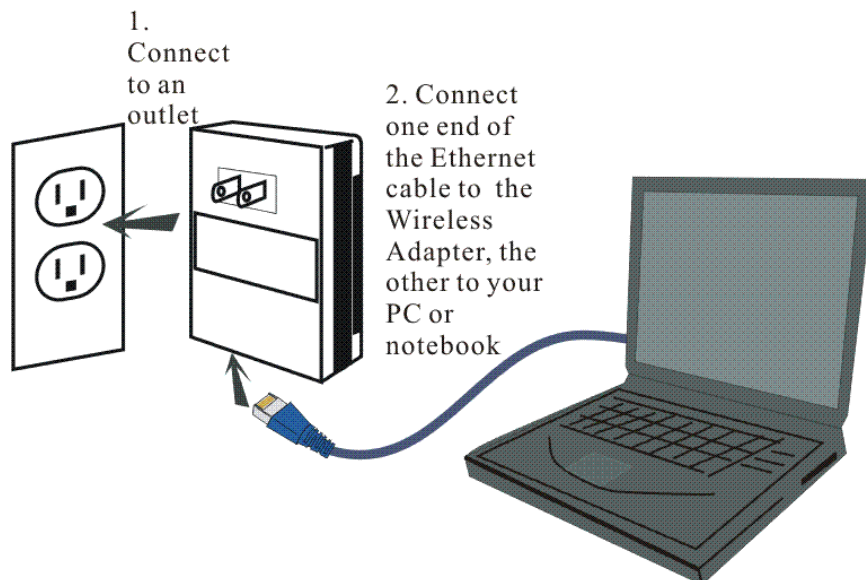

LED Indicators

Front Panel: (LED Indicators)

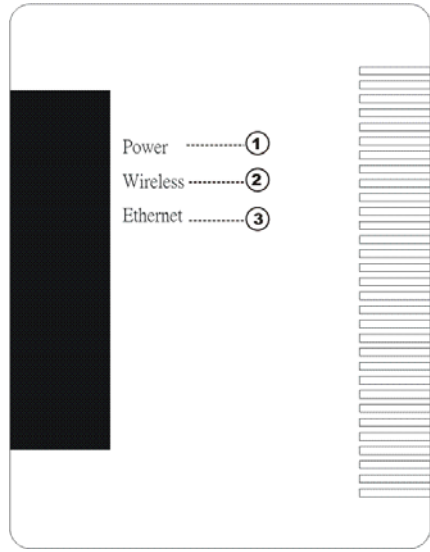

	LED indicator	Color	Status	
			Solid	Flashing
1	Power	Green	Turns solid Green when the power is applied to this device.	NA
2	Wireless	Blue	Turns solid Blue when the power is applied to this device.	Receiving/ Sending data
3	Ethernet	Green	Turns solid Green when an Ethernet cable is connected.	Receiving/ Sending data

About the Operation Modes

This device provides four operational applications with **Portable Router, Bridge, Client (Ad-hoc) and Client (Infrastructure)** modes, which are mutually exclusive.

This device is shipped with configuration that is functional right out of the box. If you want to change the settings in order to perform more advanced configuration or even change the mode of operation, you can use the web-based utility provided by the manufacturer as described in the following sections.


AP Mode

When acting as an access point, this device connects all the stations (PC/notebook with wireless network adapter) to a wired network. All stations can have the Internet access if only the Access Point has the Internet connection.



GW Mode


When GW mode is selected, the AP will enter the gateway mode. And the wireless connection will be set up from a point-to-point local LAN into a point-to-multipoint WAN.

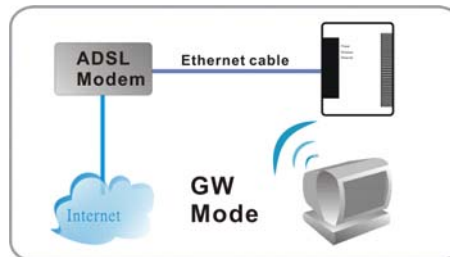

Configuration

Login

1. Start your computer. Connect an Ethernet cable between your computer and the Wireless Portable Router.
2. Make sure your wired station is set to the same subnet as the Wireless Portable Router, i.e. 192.168.1.254
3. Start your WEB browser. In the *Address* box, enter the following:
HTTP://192. 168. 1. 254

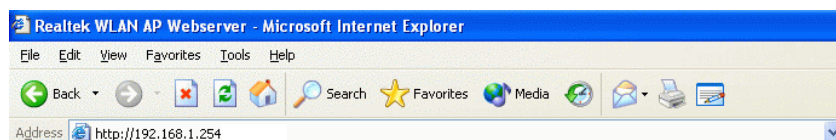

The configuration menu is divided into four categories: **Status**, **Wireless**, **TCP/IP**, and **Other settings**. Click on the desired setup item to expand the page in the main navigation page. The setup pages covered in this utility are described below.

No username and password required for the first login, however, you can set up a set of username and password for the future security, for detailed configuration, please refer to the **Password** in the later section of Configuration.

Common Connection Types

Cable Modems

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to you ISP.	Usually, none. However, some ISP's may require you to use a particular Hostname, Domain name, or MAC (physical) address.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you. Some ISP's may also require you to use a particular Hostname, Domain name, or MAC (physical) address.

DSL Modems

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to you ISP.	None.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you.
PPPoE	You connect to the ISP only when required. The IP address is usually allocated automatically.	User name and password.

PPTP	Mainly used in Europe. You connect to the ISP only when required. The IP address is usually allocated automatically, but may be Static (Fixed).	<ul style="list-style-type: none"> • PPTP Server IP Address. • User name and password. • IP Address allocated to you, if Static (Fixed).
------	---	---


Other Modems (e.g. Broadband Wireless)

Type	Details	ISP Data required
Dynamic IP Address	Your IP Address is allocated automatically, when you connect to you ISP.	None.
Static (Fixed) IP Address	Your ISP allocates a permanent IP Address to you.	IP Address allocated to you.

Configuration via Web

Wireless Mode


Select a wireless mode and then click the **Setup** button to enter its configuration page.

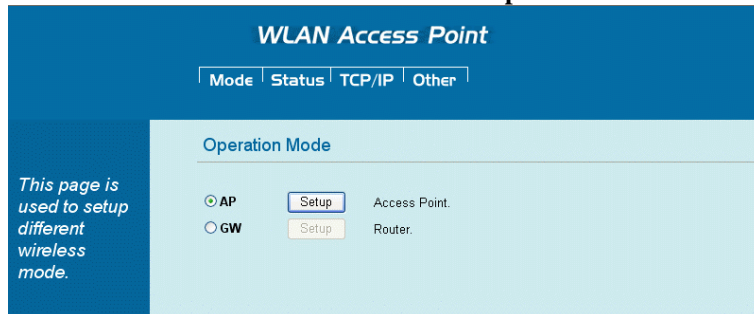

Wireless Mode


AP	When acting as an access point, this device connects all the stations (PC/notebook with wireless network adapter) to a wired network. All stations can have the Internet access if only the Access Point has the Internet connection.
GW	Select GW will enter the gateway mode. This means that the wireless connection will be set up from a point-to-point wireless LAN into a point-to-multipoint WAN.

AP Mode

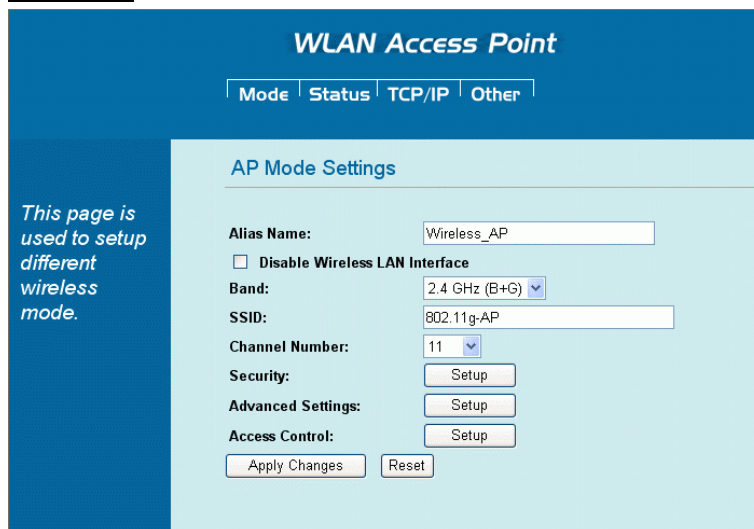

AP Mode Settings

Alias Name	Display the name of this device.
Disable Wireless LAN Interface	Check the box to disable the Wireless LAN Interface, by so doing, you won't be able to make wireless connection with this Access Point in the network you are located. In other words, this device will not be visible by any wireless station.
Band	You can choose one mode of the following you need. <input checked="" type="radio"/> 2.4GHz (B): 802.11b supported rate only. <input checked="" type="radio"/> 2.4GHz (G): 802.11g supported rate only. <input checked="" type="radio"/> 2.4GHz (B+G): 802.11b supported rate and 802.11g supported rate.

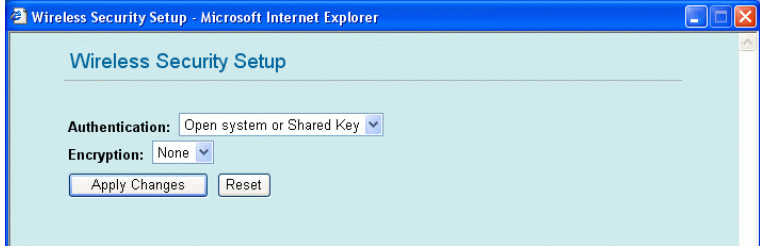	The default is 2.4GHz (B+G) mode.
SSID	The SSID differentiates one WLAN from another, therefore, all access points and all devices attempting to connect to a specific WLAN must use the same SSID. It is case-sensitive and must not exceed 32 characters. A device will not be permitted to join the BSS unless it can provide the unique SSID. An SSID is also referred to as a network name because essentially it is a name that identifies a wireless network.
Channel Number	<p>Allow user to set the channel manually or automatically. If set channel manually, just select the channel you want to specify. If “Auto” is selected, user can set the channel range to have the Wireless Portable Router automatically survey and choose the channel with best situation for communication. The number of channels supported depends on the region of this Access Point. All stations communicating with the Access Point must use the same channel.</p>
Security	<p>Click the Setup button to enter the Security setup page.</p>  <p>Authentication: Select an Authentication from the pull-down list including Open system or Shared Key, Open System, Open System with 802.1x, Shared Key, WPA-RADIUS, WPA-PSK, WPA2-RADIUS and WPA2-PSK.</p> <p>Encryption: Select the type of encryption from the pull-down list either non or WEP.</p> <p>Use 802.1x Authentication: Select 64bit or 128bit Encryption. Select HEX if you are using hexadecimal numbers (0-9, or A-F). Select ASCII if you are using ASCII characters (case-sensitive).</p> <p>Ten hexadecimal digits or five ASCII characters are needed if 64-bit WEP is used; 26 hexadecimal digits or 13 ASCII characters are needed if 128-bit WEP is used.</p> <p>Pre-Shared Key Format: Select Passphrase or Hex (64 characters)</p> <p>Pre-Shared Key: Pre-Shared-Key serves as a password. Users may key in a 8 to 63 characters string to set the password or leave it blank, in which the 802.1x Authentication will be activated. Make sure the same password is used on client's end.</p> <p>There are two formats for choice to set the Pre-shared key, i.e. Passphrase and Hex. If Hex is selected, users will have to enter a 64 characters string. For easier configuration, the Passphrase (at least 8 characters) format is recommended.</p> <p>Group Key Life Time: Enter the number of seconds that will elapse before the group key change automatically. The default is 86400 seconds.</p> <p>Enable Pre-Authentication: The two most important features beyond WPA to become standardized through 802.11i/WPA2 are: pre-authentication, which enables secure fast roaming without noticeable signal latency.</p> <p>Preauthentication provides a way to establish a PMK security association before a client associates. The advantage is that the client reduces the time</p>

that it's disconnected to the network.

Authentication RADIUS Server: RADIUS is an authentication, authorization and accounting client-server protocol. The client is a Network Access Server that desires to authenticate its links. The server is a server that has access to a user database with authentication information.

Port: Enter the RADIUS Server's port number provided by your ISP. The default is **1812**.

IP Address: Enter the RADIUS Server's IP Address provided by your ISP.

Password: Enter the password that the AP shares with the RADIUS Server.

Enable Accounting: Check to enable this function.

Accounting RADIUS Server: Port: Enter the RADIUS Server's port number provided by your ISP. The default is **1812**.

IP Address: Enter the RADIUS Server's IP Address provided by your ISP.

Password: Enter the password that the AP shares with the RADIUS Server.

Apply Changes: Click to save and apply the current settings.

Reset: Click to clear and reset the current settings.

Advanced Settings

Wireless Advanced Setting - Microsoft Internet Explorer

Wireless Advanced Settings

Fragment Threshold: 2346 (256-2346)

RTS Threshold: 2346 (0-2346)

Beacon Interval: 100 (20-1024 ms)

Inactivity Time: 30000 (100-60480000 ms)

Preamble Type: Long Preamble Short Preamble

Broadcast SSID: Enabled Disabled

Fragment Threshold: Fragmentation mechanism is used for improving the efficiency when high traffic flows along in the wireless network. If your 802.11g Wireless LAN PC Card often transmit large files in wireless network, you can enter new Fragment Threshold value to split the packet. The value can be set from 256 to 2346. The default value is **2346**.

RTS Threshold: RTS Threshold is a mechanism implemented to prevent the “**Hidden Node**” problem. “**Hidden Node**” is a situation in which two stations are within range of the same Access Point, but are not within range of each other. Therefore, they are hidden nodes for each other. When a station starts data transmission with the Access Point, it might not notice that the other station is already using the wireless medium. When these two stations send data at the same time, they might collide when arriving simultaneously at the Access Point. The collision will most certainly result in a loss of messages for both stations.

Thus, the RTS Threshold mechanism provides a solution to prevent data collisions. When you enable RTS Threshold on a suspect “hidden station”, this station and its Access Point will use a Request to Send (RTS). The station will send an RTS to the Access Point, informing that it is going to transmit the data. Upon receipt, the Access Point will respond with a CTS message to all station within its range to notify all other stations to defer transmission. It will also confirm the requestor station that the Access Point has reserved it for the time-frame of the requested transmission.

If the “Hidden Node” problem is an issue, please specify the packet size. The RTS mechanism will be activated if the data size exceeds the value you set. The default value is **2347**.

Warning: Enabling RTS Threshold will cause redundant network overhead that could negatively affect the throughput performance instead of providing a remedy.

This value should remain at its default setting of **2347**. Should you encounter inconsistent data flow, only minor modifications of this value are recommended.

Beacon Interval: Beacon Interval is the amount of time between beacon transmissions. Before a station enters power save mode, the station needs the beacon interval to know when to wake up to receive the beacon (and learn whether there are buffered frames at the access point).

Inactivity Time:

Data Rate: By default, the unit adaptively selects the highest possible rate for transmission. Select the basic rates to be used among the following options: Auto, 1, 2, 5.5, 11 or 54 Mbps. For most networks the default setting is **Auto** which is the best choice. When **Auto** is enabled the transmission rate will select the optimal rate. If obstacles or interference are present, the system will automatically fall back to a lower rate.

Preamble Type: A preamble is a signal used in wireless environment to synchronize the transmitting timing including Synchronization and Start frame delimiter. (**Note:** If you want to change the Preamble type into **Long** or **Short**, please check the setting of AP)

Broadcast SSID: Enable: This wireless AP will broadcast its SSID to stations.


Disable: This wireless AP will not broadcast its SSID to stations. If stations want to connect to this wireless AP, this AP’s SSID should be known in advance to make a connection.

Apply Changes: Click to save and apply the current setting.

Reset: Click to clear and reset the current settings.

Access Control

Click to enter the Access Control screen.

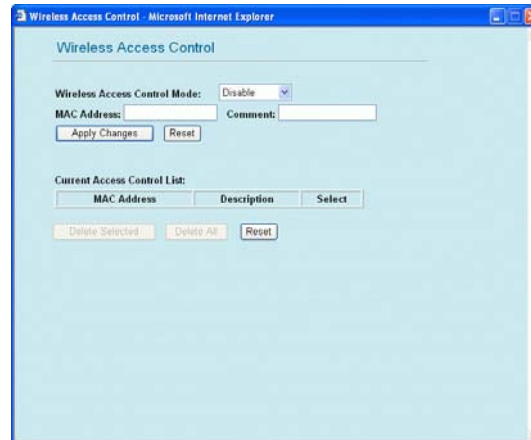

Wireless Access Control Mode: Select the Access Control Mode from the pull-down menu.

- **Disable:** Select to disable Wireless Access Control Mode.
- **Allow Listed:** Only the stations shown in the table can associate with the AP.


Deny Listed: Stations shown in the table won’t be able to associate with the AP.

MAC Address: Enter the MAC Address of a station that is allowed to access this Access Point.


Comment: You may enter up to 20 characters as a remark to the previous

	<p>MAC Address.</p> <p>Apply Changes: Press to save the new settings on the screen.</p> <p>Reset: Press to discard the data you have entered since last time you press Apply Change.</p> <p>Delete Selected: To delete clients from access to this Access Point, you may firstly check the Select checkbox next to the MAC address and Comments, and press Delete Selected.</p> <p>Delete All: To delete all the clients from access to this Access Point, just press Delete All without selecting the checkbox.</p> <p>Reset: If you have made any selection, press Reset will clear all the select mark.</p>
Apply Changes	Click to save the current settings.
Reset	Click to reset this page.

GW mode

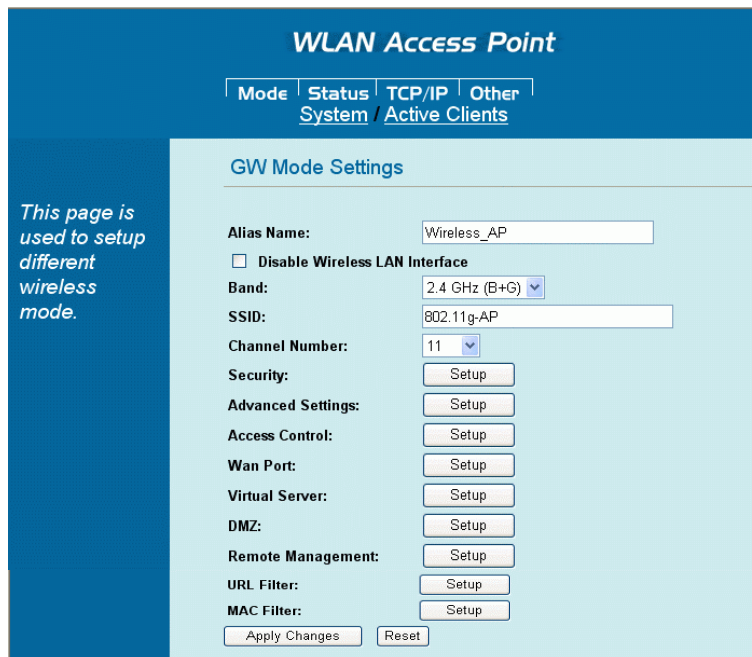

GW Mode Settings	
Alias Name	Display the name of this device.
Disable Wireless LAN Interface	Check the box to disable the Wireless LAN Interface, by so doing, you won't be able to make wireless connection with this Portable Router in the network you are located. In other words, this device will not be visible by any wireless station.
Band	<p>You can choose one mode of the following you need.</p> <p>Ⓒ 2.4GHz (B): 802.11b supported rate only.</p> <p>Ⓒ 2.4GHz (G): 802.11g supported rate only.</p> <p>Ⓒ 2.4GHz (B+G): 802.11b supported rate and 802.11g supported rate.</p> <p>The default is 2.4GHz (B+G) mode.</p>
SSID	The SSID differentiates one WLAN from another, therefore, all access points and all devices attempting to connect to a specific WLAN must use the same SSID. It is case-sensitive and must not exceed 32 characters. A

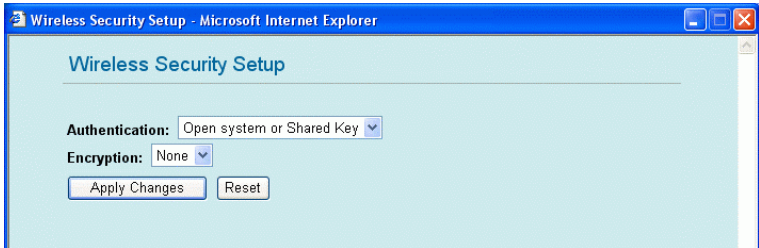	<p>device will not be permitted to join the BSS unless it can provide the unique SSID. An SSID is also referred to as a network name because essentially it is a name that identifies a wireless network.</p>
<p>Channel Number</p>	<p>Allow user to set the channel manually or automatically. If set channel manually, just select the channel you want to specify. If "Auto" is selected, user can set the channel range to have the Wireless Portable Router automatically survey and choose the channel with best situation for communication. The number of channels supported depends on the region of this Portable Router. All stations communicating with the Portable Router must use the same channel.</p>
<p>Security</p>	<p>Click the Setup button to enter the Security setup page.</p>  <p>Authentication: Select an Authentication from the pull-down list including Open system or Shared Key, Open System, Open System with 802.1x, Shared Key, WPA-RADIUS, WPA-PSK, WPA2-RADIUS and WPA2-PSK.</p> <p>Encryption: Select the type of encryption from the pull-down list either non or WEP.</p> <p>Use 802.1x Authentication: Select 64bit or 128bit Encryption. Select HEX if you are using hexadecimal numbers (0-9, or A-F). Select ASCII if you are using ASCII characters (case-sensitive).</p> <p>Ten hexadecimal digits or five ASCII characters are needed if 64-bit WEP is used; 26 hexadecimal digits or 13 ASCII characters are needed if 128-bit WEP is used.</p> <p>Pre-Shared Key Format: Select Passphrase or Hex (64 characters)</p> <p>Pre-Shared Key: Pre-Shared-Key serves as a password. Users may key in a 8 to 63 characters string to set the password or leave it blank, in which the 802.1x Authentication will be activated. Make sure the same password is used on client's end.</p> <p>There are two formats for choice to set the Pre-shared key, i.e. Passphrase and Hex. If Hex is selected, users will have to enter a 64 characters string. For easier configuration, the Passphrase (at least 8 characters) format is recommended.</p> <p>Group Key Life Time: Enter the number of seconds that will elapse before the group key change automatically. The default is 86400 seconds.</p> <p>Enable Pre-Authentication: The two most important features beyond WPA to become standardized through 802.11i/WPA2 are: pre-authentication, which enables secure fast roaming without noticeable signal latency.</p> <p>Preauthentication provides a way to establish a PMK security association before a client associates. The advantage is that the client reduces the time that it's disconnected to the network.</p> <p>Authentication RADIUS Server: RADIUS is an authentication, authorization and accounting client-server protocol. The client is a Network Access Server that desires to authenticate its links. The server is a server that</p>

has access to a user database with authentication information.

Port: Enter the RADIUS Server's port number provided by your ISP. The default is **1812**.

IP Address: Enter the RADIUS Server's IP Address provided by your ISP.

Password: Enter the password that the AP shares with the RADIUS Server.

Enable Accounting: Check to enable this function.

Accounting RADIUS Server

Port: Enter the RADIUS Server's port number provided by your ISP. The default is **1812**.


IP Address: Enter the RADIUS Server's IP Address provided by your ISP.

Password: Enter the password that the AP shares with the RADIUS Server.

Apply Changes: Click to save and apply the current settings.

Reset: Click to clear and reset the current settings.

Advanced Settings

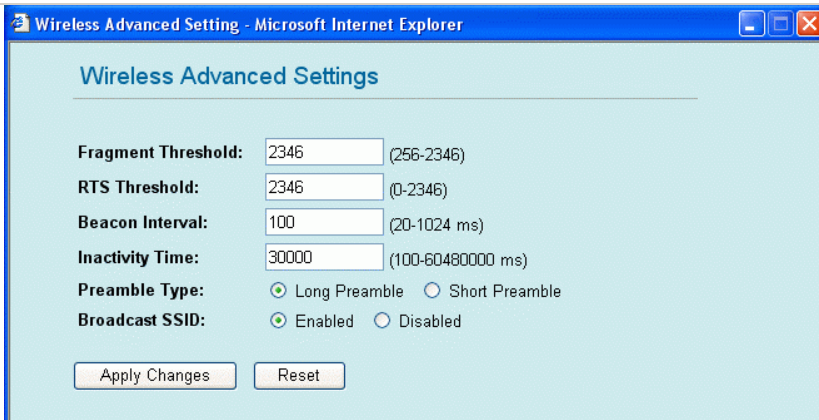

Fragment Threshold: Fragmentation mechanism is used for improving the efficiency when high traffic flows along in the wireless network. If your Wireless Router often transmits large files in wireless network, you can enter new Fragment Threshold value to split the packet. The value can be set from 256 to 2346. The default value is **2346**.

RTS Threshold: RTS stands for “Request to Send”. This parameter controls what size data packet the low level RF protocol issues to an RTS packet. The default is 2346. The RTS Threshold mechanism provides a solution to prevent data collisions. When you enable RTS Threshold on a suspect “hidden station”, this station and its Portable Router will use a Request to Send (RTS). The station will send an RTS to the Access Point, informing that it is going to transmit the data. Upon receipt, the Access Point will respond with a CTS message to all station within its range to notify all other stations to defer transmission. It will also confirm the requestor station that the Access Point has reserved it for the time-frame of the requested transmission.

Beacon Interval: Enter a value between 20-1024 milliseconds. The Beacon Interval value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the Router to synchronize the wireless network. The default value is **100**.

Inactivity Time:

Data Rate: By default, the unit adaptively selects the highest possible rate for transmission. Select the basic rates to be used among the following options: Auto, 1, 2, 5.5, 11 or 54 Mbps. For most networks the default setting is **Auto** which is the best choice. When **Auto** is enabled the transmission rate will select the optimal rate. If obstacles or interference are present, the

system will automatically fall back to a lower rate.

Preamble Type: A preamble is a signal used in wireless environment to synchronize the transmitting timing including Synchronization and Start frame delimiter. (**Note:** If you want to change the Preamble type into **Long** or **Short**, please check the setting of AP)

Broadcast SSID

Enable: This Wireless Router will broadcast its SSID to stations.


Disable: This Wireless Router will not broadcast its SSID to stations. If stations want to connect to this Wireless Router, this Wireless Router's SSID should be known in advance to make a connection.

Apply Changes: Click to save and apply the current setting.

Reset: Click to clear and reset the current settings.

Access Control

Click to enter the Access Control screen.

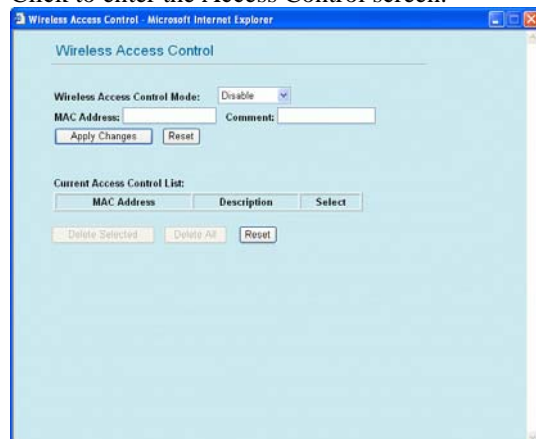

Wireless Access Control Mode: Select the Access Control Mode from the pull-down menu.

- **Disable:** Select to disable Wireless Access Control Mode.
- **Allow Listed:** Only the stations shown in the table can associate with the Wireless Router.

Deny Listed: Stations shown in the table won't be able to associate with the Wireless Router.

MAC Address: Enter the MAC Address of a station that is allowed to access this Access Point.

Comment: You may enter up to 20 characters as a remark to the previous MAC Address.

Apply Changes: Press to save the new settings on the screen.


Reset: Press to discard the data you have entered since last time you press Apply Change.

Delete Selected: To delete clients from access to this Access Point, you may firstly check the **Select** checkbox next to the MAC address and Comments, and press **Delete Selected**.

Delete All: To delete all the clients from access to this Access Point, just press **Delete All** without selecting the checkbox.

Reset: If you have made any selection, press **Reset** will clear all the select mark.

WAN Port

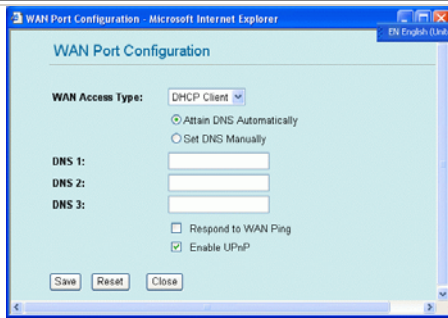

WAN Access Type: Select the WAN access type (Static IP, DHCP, PPPoE and PPTP) from the pull-down menu.

Attain DNS Automatically:

Set DNS Manually:

DNS1~3: Enter the DNS server IP address(es) provided by your ISP, or you can specify your own preferred DNS server IP address(es).

DNS 1 and DNS 2 servers are optional. You can enter another DNS server's IP address as a backup. DNS 1 and DNS 2 servers will be used when the DNS 1 server fails.


Respond to WAN Ping:

Enable UPnP: Universal Plug and Play (UPnP) allows Windows Me and XP to automatically configure the Router for various Internet applications, such as gaming and videoconferencing. If you want to use UPnP, select **Enable UPnP**.

Save: Click to save and apply the current settings.

Close: click to exit the current settings.

Virtual Server

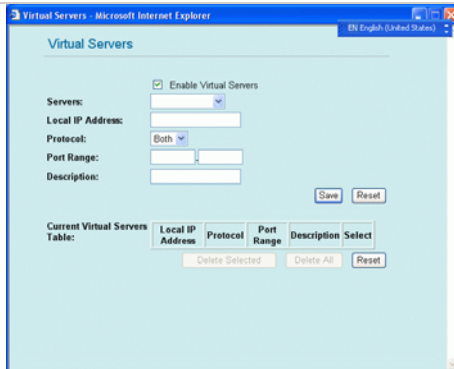

Enable Virtual Servers: Check to enable the Virtual Server function.

Local IP Address: Enter the Local Server's IP address.

Protocol: Select the protocol (TCP, UDP or Both) used to the remote system or service.

Port Range: For TCP and UDP Services, enter the beginning of the range of port numbers used by the service. If the service uses a single port number, enter it in both the start and finish fields.


Description: You may key in a description for the local IP address.

Save: Click to save and apply the current settings.

Reset: Click to clear and rest the current settings.

Current Virtual Servers table: Shows the current virtual servers information.

DMZ

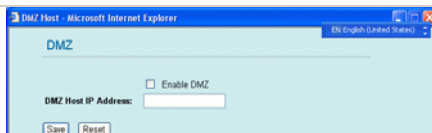

Enable DMZ: If the DMZ Host Function is enabled, it means that you set up

DMZ host at a particular computer to be exposed to the Internet so that some applications/software, especially Internet / online game can have two-way connections.


DMZ Host IP Address: Enter the IP address of a particular host in your LAN which will receive all the packets originally going to the WAN port/Public IP address above.

Save: Click to save the current settings.

Reset: Click to restore to the default values.

Note: You need to give your LAN PC clients a fixed/static IP address for DMZ to work properly.

Remote Management

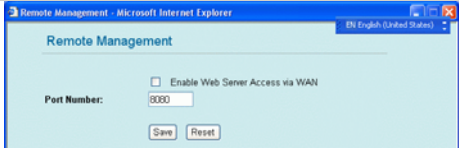

Enable Web Server Access via WAN: to permit remote access of the Router, from outside the local network, select to enable.


Otherwise, keep the default setting, **Disabled**.

Port Number: Enter the port number that will be open to outside access.

Save: Click to save the current settings.

Reset: Click to restore to the default values.

URL Filter

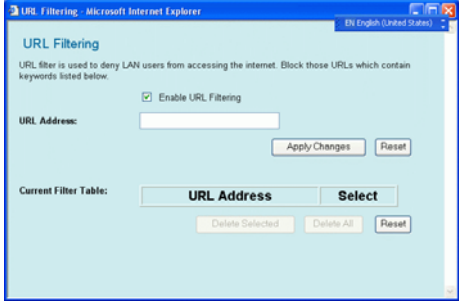

Enable URL Filtering: Click to enable the URL filtering function

URL Address: You can block websites with specific URL addresses.

Apply Changes: Click to save the current settings

Reset: Click to clear the current settings


Current Filter Table: Shows the current URL address status.

Delete Selected: Select the unwanted URL addresses and then click the Delete Selected button to eliminate them

Delete All: Click to delete all the URL addresses in the table

Reset: Click to clear the current settings

MAC Filter

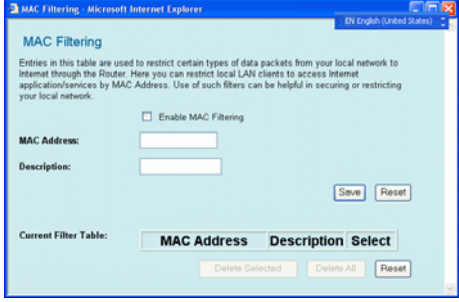

Enable MAC Filtering:


MAC Address: For MAC filtering, enter the 12-digit MAC address in the appropriate MAC field

Save: Click to save the current settings.

	<p>Reset: Click to restore to the default values.</p> <p>Current Filter Table: Shows</p> <p>Delete Selected: Select the unwanted MAC addresses and then click the Delete Selected button to eliminate them</p> <p>Delete All: Click to delete all the MAC addresses in the table</p> <p>Reset: Click to clear the current settings</p>
Apply Changes	Click to save the current settings.
Reset	Click to reset this page.

Status

System Data

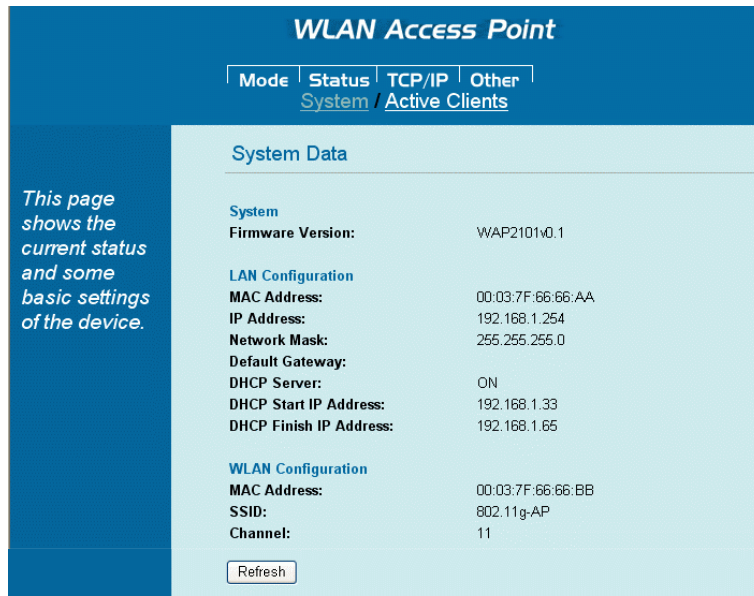

System Data

System Data	
Uptime	The time period since the device was up.
Firmware Version	The current version of the firmware installed in this device.
Wireless	
Mode	There are four modes supported, Access Point, Client (Ad-hoc and Infrastructure), WDS Bridge and WDS repeater. The default mode is Access Point.
Band	Displays the current band in use.
SSID	The SSID differentiates one WLAN from another, therefore, all access points and all devices attempting to connect to a specific WLAN must use the same SSID. It is case-sensitive and must not exceed 32 characters. A device will not be permitted to join the BSS unless it can provide the unique SSID. An SSID is also referred to as a network name because essentially it is a name that identifies a wireless network.
Channel Number	The number of channels supported depends on the region of

	this Access Point. All stations communicating with the Access Point must use the same channel.
Encryption	WEP Encryption (Wired Equivalent Privacy) is set to Disabled by default. When WEP is enabled, data packet is encrypted before being transmitted. The WEP prevents data packets from being eavesdropped by unrelated people. By using WEP data encryption, there may be a significant degradation of the data throughput on the wireless link.
Associated Clients	Displays the total number of clients associated to this AP. You can have up to 64 clients to associate to this Access Point.
BSSID	BSSID displays the ID of current BSS, which uniquely identifies each BSS. In AP mode, this value is the MAC address of this Access Point.
LAN Configuration	
Connection Method	Shows the currently used connection method.
Physical Address	Shows the MAC address of this device.
IP Address	Shows the LAN IP address.
Network Mask	Shows the LAN subnet mask.
Default Gateway	Shows the LAN default gateway.
DHCP Server	Shows the current DHCP Server status.
DHCP Start IP Address	Shows the DHCP Start IP address.
DHCP Finish IP Address	Shows the DHCP Finish IP address.
Internet Configuration	
Connection Method	Shows the current used internet connection method.
Physical Address	Shows the MAC address of this device.
IP Address	Shows the Internet IP address
Network Mask	Shows the subnet mask IP address.
Default Gateway	Shows the Internet default gateway.
Refresh	Click to refresh the current system data.

Active Clients

Displays the wireless clients that are currently connecting with this Wireless Portable Router.

WLAN Access Point

Mode
Status
TCP/IP
Other

System / Active Clients

Active Wireless Client Table

MAC Address	Chan	Tx Rate (Mbps)	RSSI	Tx Packet	Rx Packet
00:13:ce:84:75:74	11	1M	7	3	47008

This table shows the MAC address, transmission, reception packet counters and encrypted status for each associated wireless client.

Refresh	Click to refresh the Active Wireless Client table.
----------------	--

WLAN Access Point

Mode | Status | TCP/IP | Other

LAN Interface Setup

This page is used to configure the parameters for local area network which connects to the LAN port of your Access Point. Here you may change the setting for IP address, subnet mask, DHCP, etc...

IP Address:
Subnet Mask:
Default Gateway:
DHCP: Server Server IP:
DHCP Client Range: -
DNS Server:

IP Address	Default: 192.168.1.254 (this is the local address of this Router)
Subnet Mask	Default: 255.255.255.0
Default Gateway	Shows the default gateway IP address.
DHCP	<p>Disable: Select to disable this Router to distribute IP Addresses (Disabled)</p> <p>Server: Select to enable this Router to distribute IP Addresses (DHCP Server). And the following field will be activated for you to enter the starting IP Address</p>
DHCP Client Range	<p>The starting address of this local IP network address pool. The pool is a piece of continuous IP address segment. Keep the default value 192.168.1.1 should work for most cases.</p> <ul style="list-style-type: none"> Maximum: 253. Default value 253 should work for most cases. <p><i>Note: If "Continuous IP address poll starts" is set at 192.168.1.1 and the "Number of IP address in pool" is 253, the device will distribute IP addresses from 192.168.1.1 to 192.168.1.253 to all the computers in the network that request IP addresses from DHCP server (Router)</i></p>
Show Client	Click to show Active DHCP Client table.
DNS Server	Enter the Domain Name Service IP address.
Clone MAC Address	You can specify the MAC address of your Access Point to replace the factory setting.
Apply Changes	After completing the settings on this page, click to save the settings.
Reset	Click to restore to default values.

Other

Upgrade Firmware

The screenshot shows the 'WLAN Access Point' web interface. At the top, there are navigation tabs: 'Mode', 'Status', 'TCP/IP', and 'Other'. Below 'Status', there are links for 'Upgrade Firmware', 'Reboot', and 'Password'. The main content area is titled 'Upgrade Firmware'. On the left, a blue box contains the text: 'Please have the new firmware image prepared. It takes a moment to save the new image and reboot automatically. Please be waiting.' The main area has a 'Select File:' label followed by a text input field and a 'Browse...' button. Below this are three buttons: 'Upload', 'Reset', and 'Factory Default'.

Upgrade Firmware

Upgrade Firmware	
Browse	Click the Browse button, find and open the firmware file (the browser will display to correct file path).
Upload	Click the Upload button to perform.
Reset	Click the Reset button to restore default values.

Reboot

Click the Reboot button to reboot the hardware system.

The screenshot shows the 'WLAN Access Point' web interface. At the top, there are navigation tabs: 'Mode', 'Status', 'TCP/IP', and 'Other'. Below 'Status', there are links for 'Upgrade Firmware', 'Reboot', and 'Password'. The main content area is titled 'Reboot System'. On the left, a blue box contains the text: 'Anytime you want to warm boot this device for any purposes.' The main area has a 'Reboot System:' label followed by a 'Reboot' button.

Password

The screenshot shows the 'WLAN Access Point' web interface. At the top, there are navigation tabs: 'Mode', 'Status', 'TCP/IP', and 'Other'. Below 'Status', there are links for 'Upgrade Firmware', 'Reboot', and 'Password'. The main content area is titled 'Password Setup'. On the left, a blue box contains the text: 'For the administrator's first time login, it is strongly recommended to set your user password for security issue.' The main area has two labels: 'New Password:' and 'Confirmed Password:', each followed by a text input field. Below these are two buttons: 'Apply Change' and 'Reset'.

Password Setup

Password Setup	
New Password	Maximum input is 36 alphanumeric characters (case sensitive)
Confirmed Password	Key in the password again to confirm.
Apply Change	After completing the settings on this page, click the Apply Change button to save the settings.
Reset	Click the Reset button to clear settings.

Chapter 4: PC Configuration

Overview

For each PC, the following may need to be configured:

- TCP/IP network settings
- Internet Access configuration
- Wireless configuration

Windows Clients

This section describes how to configure Windows clients for Internet access via the Wireless Router.

The first step is to check the PC's TCP/IP settings.

The Wireless Router uses the TCP/IP network protocol for all functions, so it is essential that the TCP/IP protocol be installed and configured on each PC.

TCP/IP Settings - Overview

If using the default Wireless Router settings, and the default Windows TCP/IP settings, no changes need to be made.


- By default, the Wireless Router will act as a DHCP Server, automatically providing a suitable IP Address (and related information) to each PC when the PC boots.
- For all non-Server versions of Windows, the default TCP/IP setting is to act as a DHCP client.

If using a Fixed (specified) IP address, the following changes are required:


- The *Gateway* must be set to the IP address of the Wireless Router
- The *DNS* should be set to the address provided by your ISP.

Checking TCP/IP Settings - Windows 98/ME:

1. Select *Control Panel - Network*. You should see a screen like the following:

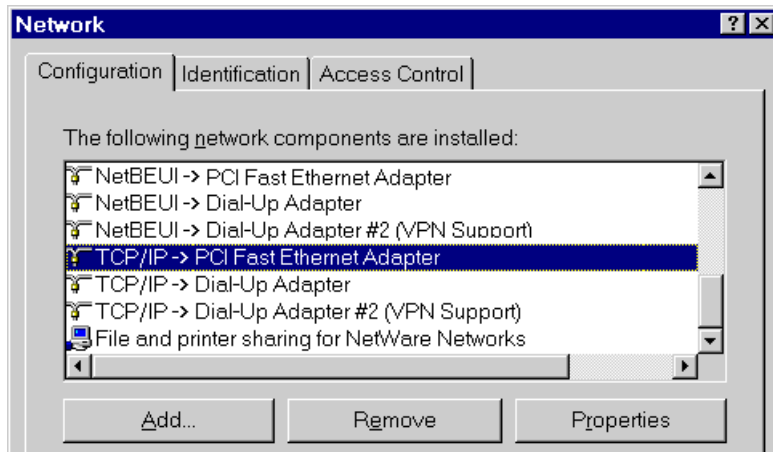

1. Select the *TCP/IP* protocol for your network card.
2. Click on the *Properties* button. You should then see a screen like the following.

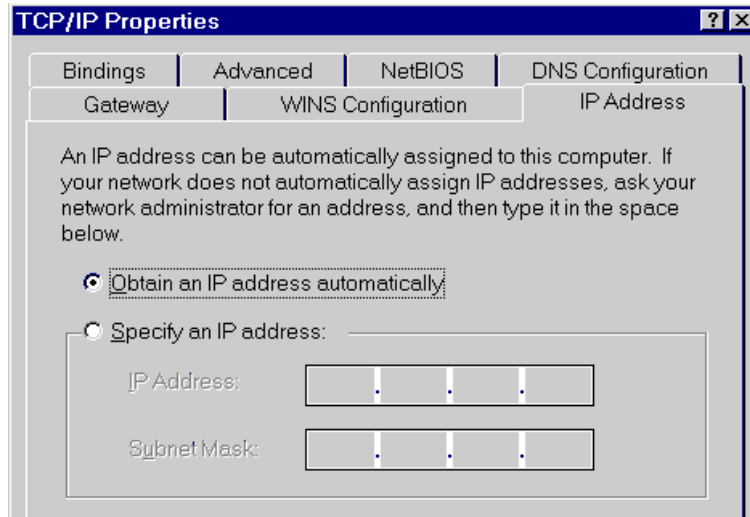

Ensure your TCP/IP settings are correct, as follows:

Using DHCP


To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Using "Specify an IP Address"

If your PC is already configured, check with your network administrator before making the following changes:

- On the *Gateway* tab, enter the Wireless Router's IP address in the *New Gateway* field and click *Add*, as shown below. Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.

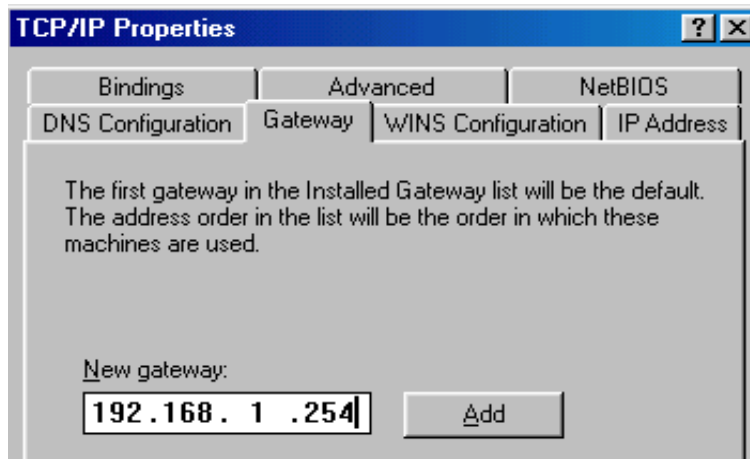


- On the *DNS Configuration* tab, ensure *Enable DNS* is selected. If the *DNS Server Search Order* list is empty, enter the DNS address provided by your ISP in the fields beside the *Add* button, then click *Add*.

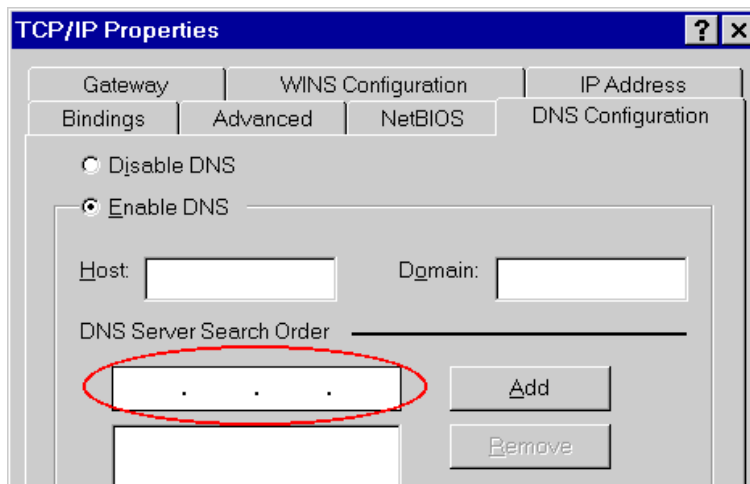


Checking TCP/IP Settings - Windows NT4.0

2. Select *Control Panel - Network*, and, on the *Protocols* tab, select the TCP/IP protocol, as shown below.

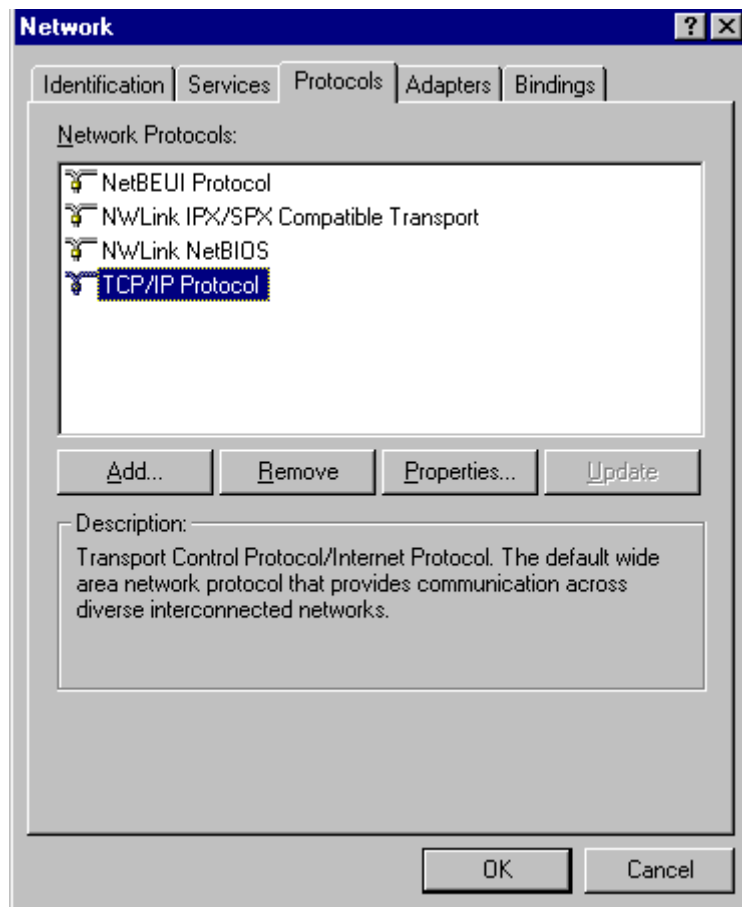

3. Click the *Properties* button to see a screen like the one below.

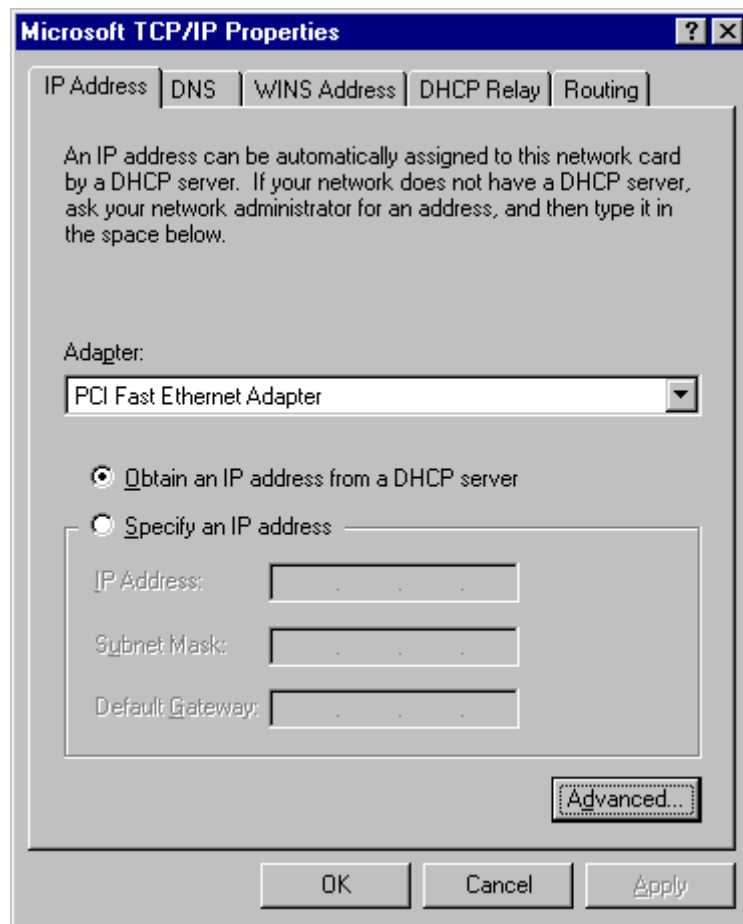

4. Select the network card for your LAN.
5. Select the appropriate radio button - *Obtain an IP address from a DHCP Server* or *Specify an IP Address*, as explained below.

Obtain an IP address from a DHCP Server


This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Specify an IP Address

If your PC is already configured, check with your network administrator before making the following changes.

3. The *Default Gateway* must be set to the IP address of the Wireless Router. To set this:
 - Click the *Advanced* button on the screen above.
 - On the following screen, click the *Add* button in the *Gateways* panel, and enter the Wireless Router's IP address.
 - If necessary, use the *Up* button to make the Wireless Router the first entry in the *Gateways* list.

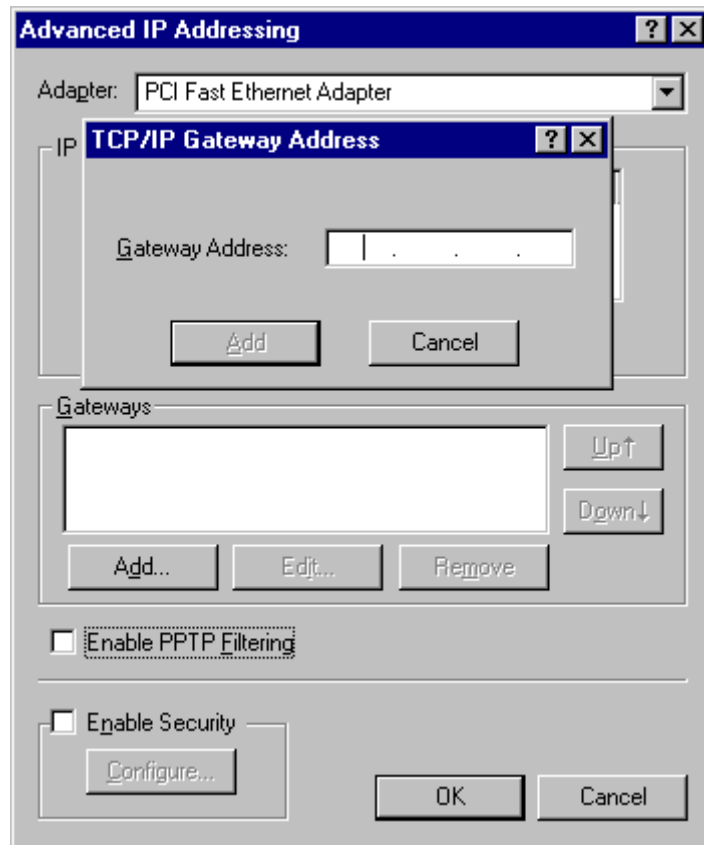


6. The DNS should be set to the address provided by your ISP, as follows:
 - Click the DNS tab.
 - On the DNS screen, shown below, click the *Add* button (under *DNS Service Search Order*), and enter the DNS provided by your ISP.

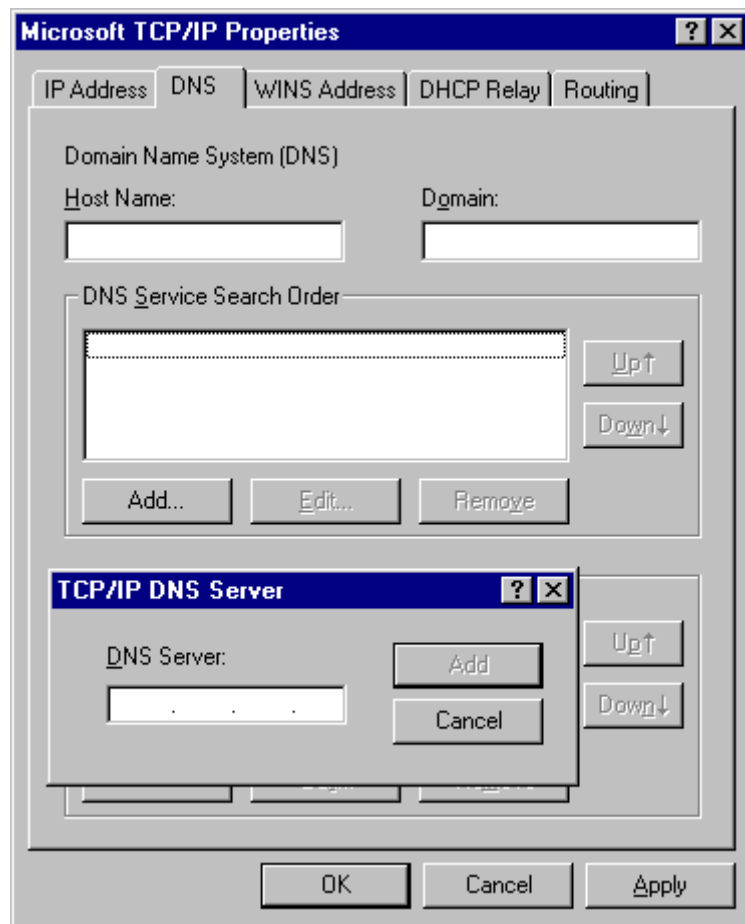


Checking TCP/IP Settings - Windows 2000:

4. Select *Control Panel - Network and Dial-up Connection*.
7. Right - click the *Local Area Connection* icon and select *Properties*. You should see a screen like the following:

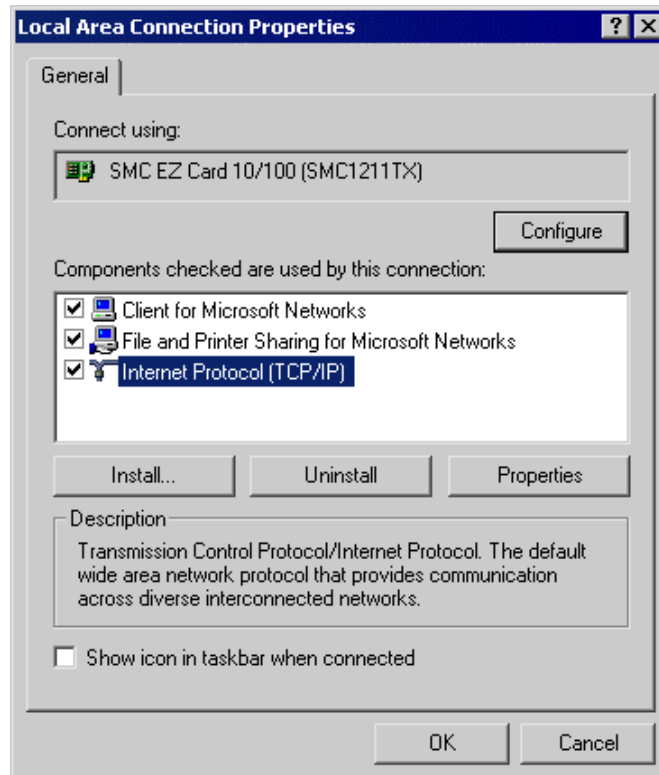

8. Select the *TCP/IP* protocol for your network card.
9. Click on the *Properties* button. You should then see a screen like the following.

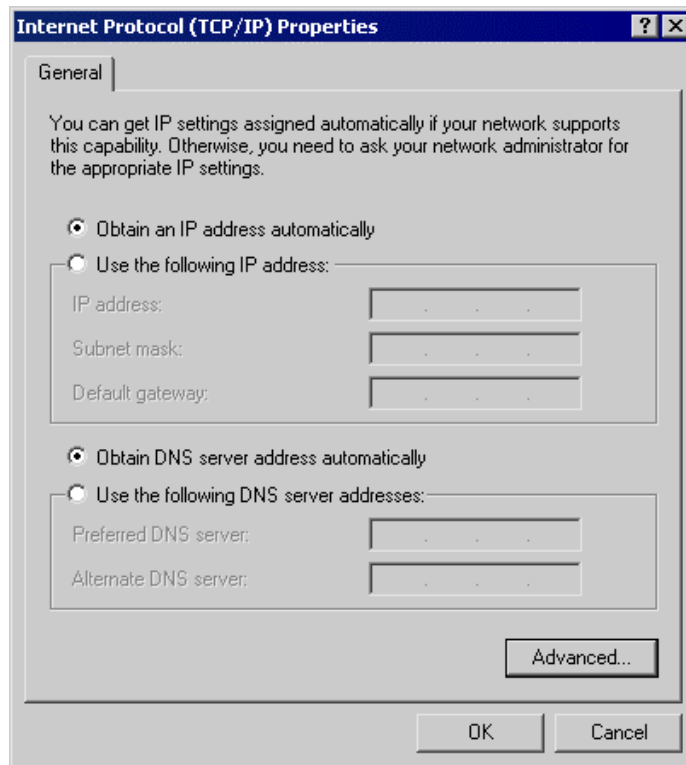

10. Ensure your TCP/IP settings are correct, as described below.

Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.


Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.


- Enter the Wireless Router's IP address in the *Default gateway* field and click *OK*. (Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.)
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click *OK*.

Checking TCP/IP Settings - Windows XP

5. Select *Control Panel - Network Connection*.
11. Right click the *Local Area Connection* and choose *Properties*. You should see a screen like the following:

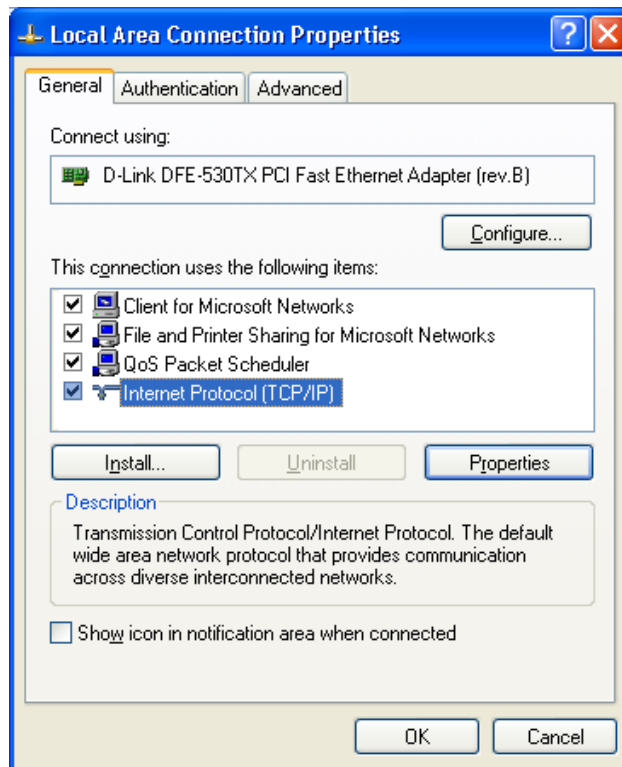

12. Select the *TCP/IP* protocol for your network card.
13. Click on the *Properties* button. You should then see a screen like the following.

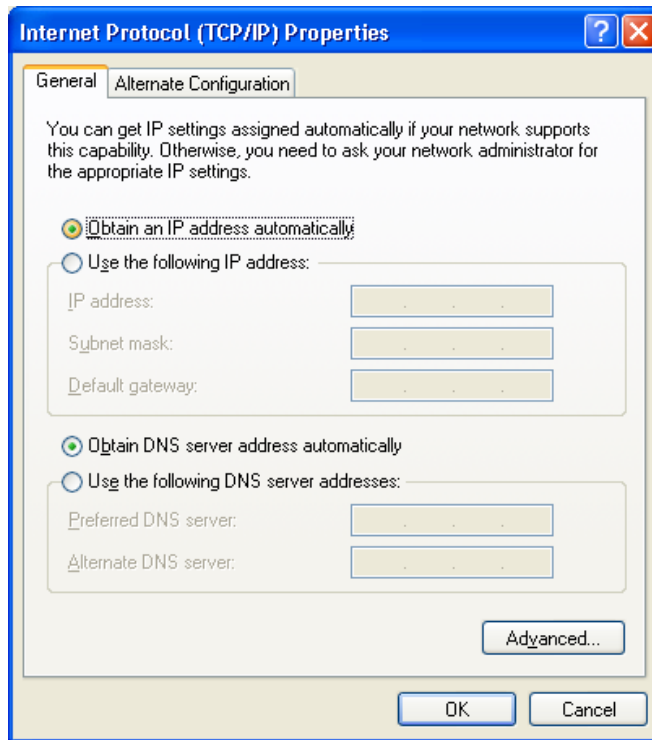

14. Ensure your TCP/IP settings are correct.

Using DHCP

To use DHCP, select the radio button *Obtain an IP Address automatically*. This is the default Windows setting. **Using this is recommended.** By default, the Wireless Router will act as a DHCP Server.

Restart your PC to ensure it obtains an IP Address from the Wireless Router.

Using a fixed IP Address ("Use the following IP Address")

If your PC is already configured, check with your network administrator before making the following changes.

- In the *Default gateway* field, enter the Wireless Router's IP address and click *OK*. Your LAN administrator can advise you of the IP Address they assigned to the Wireless Router.
- If the *DNS Server* fields are empty, select *Use the following DNS server addresses*, and enter the DNS address or addresses provided by your ISP, then click *OK*.

Internet Access

To configure your PCs to use the Wireless Router for Internet access:

- Ensure that the DSL modem, Cable modem, or other permanent connection is functional.
- Use the following procedure to configure your Browser to access the Internet via the LAN, rather than by a Dial-up connection.

For Windows 9x/ME/2000

6. Select *Start Menu - Settings - Control Panel - Internet Options*.
15. Select the *Connection* tab, and click the *Setup* button.
16. Select "I want to set up my Internet connection manually, or I want to connect through a local area network (LAN)" and click *Next*.
17. Select "I connect through a local area network (LAN)" and click *Next*.
18. Ensure all of the boxes on the following Local area network Internet Configuration screen are **unchecked**.
19. Check the "No" option when prompted "Do you want to set up an Internet mail account now?"
20. Click *Finish* to close the Internet Connection Wizard.
Setup is now completed.

For Windows XP

7. Select *Start Menu - Control Panel - Network and Internet Connections*.
21. Select *Set up or change your Internet Connection*.
22. Select the *Connection* tab, and click the *Setup* button.
23. Cancel the pop-up "Location Information" screen.
24. Click *Next* on the "New Connection Wizard" screen.
25. Select "Connect to the Internet" and click *Next*.
26. Select "Set up my connection manually" and click *Next*.
27. Check "Connect using a broadband connection that is always on" and click *Next*.
28. Click *Finish* to close the New Connection Wizard.
Setup is now completed.

Accessing AOL

To access AOL (America On Line) through the Wireless Router, the *AOL for Windows* software must be configured to use TCP/IP network access, rather than a dial-up connection. The configuration process is as follows:

- Start the *AOL for Windows* communication software. Ensure that it is Version 2.5, 3.0 or later. This procedure will not work with earlier versions.
- Click the *Setup* button.
- Select *Create Location*, and change the location name from "New Locality" to "Wireless Router".
- Click *Edit Location*. Select *TCP/IP* for the *Network* field. (Leave the *Phone Number* blank.)
- Click *Save*, then *OK*.
Configuration is now complete.
- Before clicking "Sign On", always ensure that you are using the "Wireless Router" location.

Macintosh Clients

From your Macintosh, you can access the Internet via the Wireless Router. The procedure is as follows.

8. Open the TCP/IP Control Panel.
29. Select *Ethernet* from the *Connect via* pop-up menu.
30. Select *Using DHCP Server* from the *Configure* pop-up menu. The DHCP Client ID field can be left blank.
31. Close the TCP/IP panel, saving your settings.

Note:

If using manually assigned IP addresses instead of DHCP, the required changes are:

- Set the *Router Address* field to the Wireless Router's IP Address.
- Ensure your DNS settings are correct.

Linux Clients

To access the Internet via the Wireless Router, it is only necessary to set the Wireless Router as the "Gateway".

Ensure you are logged in as "root" before attempting any changes.

Fixed IP Address

By default, most Unix installations use a fixed IP Address. If you wish to continue using a fixed IP Address, make the following changes to your configuration.

- Set your "Default Gateway" to the IP Address of the Wireless Router.
- Ensure your DNS (Name server) settings are correct.

To act as a DHCP Client (recommended)

The procedure below may vary according to your version of Linux and X -windows shell.

9. Start your X Windows client.
10. Select *Control Panel - Network*
11. Select the "Interface" entry for your Network card. Normally, this will be called "eth0".
12. Click the *Edit* button, set the "protocol" to "DHCP", and save this data.
13. To apply your changes
 - Use the "Deactivate" and "Activate" buttons, if available.
 - OR, restart your system.

Other Unix Systems

To access the Internet via the Wireless Router:

- Ensure the "Gateway" field for your network card is set to the IP Address of the Wireless Router.
- Ensure your DNS (Name Server) settings are correct.

Wireless Station Configuration

This section applies to all Wireless stations wishing to use the Wireless Router's Access Point, regardless of the operating system which is used on the client.

To use the Wireless Portable Router in the Wireless Router, each Wireless Station must have compatible settings, as follows:

Mode	The mode must be set to <i>Infrastructure</i> .
SSID (ESSID)	This must match the value used on the Wireless Router. The default value is Untitled Note! The SSID is case sensitive.
WEP	By default, WEP on the Wireless Router is disabled . <ul style="list-style-type: none">• If WEP remains disabled on the Wireless Router, all stations must have WEP disabled.• If WEP is enabled on the Wireless Router, each station must use the same settings as the Wireless Router.

Note:

By default, the Wireless Router will allow both 802.11b and 802.11g connections.

Appendix A

Troubleshooting

Overview

This chapter covers some common problems that may be encountered while using the Wireless Router and some possible solutions to them. If you follow the suggested steps and the Wireless Router still does not function properly, contact your dealer for further advice.

General Problems

Problem 1: **Can't connect to the Wireless Router to configure it.**

Solution 1: Check the following:

- The Wireless Router is properly installed, LAN connections are OK, and it is powered ON.
- Ensure that your PC and the Wireless Router are on the same network segment. (If you don't have a router, this must be the case.)
- If your PC is set to "Obtain an IP Address automatically" (DHCP client), restart it.
- If your PC uses a Fixed (Static) IP address, ensure that it is using an IP Address within the range 192.168.1.1 to 192.168.1.253 and thus compatible with the Wireless Router's default IP Address of 192.168.1.254.

Also, the Network Mask should be set to 255.255.255.0 to match the Wireless Router.

In Windows, you can check these settings by using *Control Panel-Network* to check the *Properties* for the TCP/IP protocol.

Internet Access

Problem 1: **When I enter a URL or IP address I get a time out error.**

Solution 1: A number of things could be causing this. Try the following troubleshooting steps.

- Check if other PCs work. If they do, ensure that your PCs IP settings are correct. If using a Fixed (Static) IP Address, check the Network Mask, Default gateway and DNS as well as the IP Address.
- If the PCs are configured correctly, but still not working, check the Wireless Router. Ensure that it is connected and ON. Connect to it and check its settings. (If you can't connect to it, check the LAN and power connections.)
- If the Wireless Router is configured correctly, check your Internet connection (DSL/Cable modem etc) to see that it is working correctly.

Problem 2: **Some applications do not run properly when using the Wireless Router.**

Solution 2: The Wireless Router processes the data passing through it, so it is not transparent.

Use the *Special Applications* feature to allow the use of Internet applications which do not function correctly.

If this does solve the problem you can use the *DMZ* function. This should

work with almost every application, but:

- It is a security risk, since the firewall is disabled.
- Only one (1) PC can use this feature.

Wireless Access

Problem 1: My PC can't locate the Wireless Portable Router.

Solution 1: Check the following.

- Your PC is set to *Infrastructure Mode*. (Access Points are always in *Infrastructure Mode*)
- The SSID on your PC and the Wireless Portable Router are the same. Remember that the SSID is case-sensitive. So, for example "Workgroup" does NOT match "workgroup".
- Both your PC and the Wireless Router must have the same setting for WEP. The default setting for the Wireless Router is disabled, so your wireless station should also have WEP disabled.
- If WEP is enabled on the Wireless Router, your PC must have WEP enabled, and the key must match.
- If the Wireless Router's *Wireless* screen is set to *Allow LAN access to selected Wireless Stations only*, then each of your Wireless stations must have been selected, or access will be blocked.
- To see if radio interference is causing a problem, see if connection is possible when close to the Wireless Router. Remember that the connection range can be as little as 100 feet in poor environments.

Problem 2: Wireless connection speed is very slow.

Solution 2: The wireless system will connect at the highest possible speed, depending on the distance and the environment. To obtain the highest possible connection speed, you can experiment with the following:

- **Wireless Router location.**
Try adjusting the location and orientation of the Wireless Router.
- **Wireless Channel**
If interference is the problem, changing to another channel may show a marked improvement.
- **Radio Interference**
Other devices may be causing interference. You can experiment by switching other devices Off, and see if this helps. Any "noisy" devices should be shielded or relocated.
- **RF Shielding**
Your environment may tend to block transmission between the wireless stations. This will mean high access speed is only possible when close to the Wireless Router.



About Wireless LANs

BSS

BSS

A group of Wireless Stations and a single Access Point, all using the same ID (SSID), form a Basic Service Set (BSS).

Using the same SSID is essential. Devices with different SSIDs are unable to communicate with each other.

Channels

The Wireless Channel sets the radio frequency used for communication.

- Access Points use a fixed Channel. You can select the Channel used. This allows you to choose a Channel which provides the least interference and best performance. In the USA and Canada, 11 channels are available. If using multiple Access Points, it is better if adjacent Access Points use different Channels to reduce interference.
- In "Infrastructure" mode, Wireless Stations normally scan all Channels, looking for an Access Point. If more than one Access Point can be used, the one with the strongest signal is used. (This can only happen within an ESS.)

WEP

WEP (Wired Equivalent Privacy) is a standard for encrypting data before it is transmitted. This is desirable because it is impossible to prevent snoopers from receiving any data which is transmitted by your Wireless Stations. But if the data is encrypted, then it is meaningless unless the receiver can decrypt it.

If WEP is used, the Wireless Stations and the Access Point must have the same settings for each of the following:

WEP	Off, 64 Bit, 128 Bit
Key	For 64 Bit encryption, the Key value must match. For 128 Bit encryption, the Key value must match
WEP Authentication	Open System or Shared Key.

Wireless LAN Configuration

To allow Wireless Stations to use the Access Point, the Wireless Stations and the Access Point must use the same settings, as follows:

- Mode** On client Wireless Stations, the mode must be set to "Infrastructure". (The Access Point is always in "Infrastructure" mode.)
- SSID (ESSID)** Wireless Stations should use the same SSID (ESSID) as the Access Point they wish to connect to, but the SSID can not set to be null (blank).
- WEP** The Wireless Stations and the Access Point must use the same settings for WEP (Off, 64 Bit, 128 Bit).
WEP Key: If WEP is enabled, the Key must be the same on the Wireless Stations and the Access Point.
WEP Authentication: If WEP is enabled, all Wireless Stations must

use the same setting as the Access Point (either "Open System" or "Shared Key").

Regulatory Approvals

CE Standards

This product complies with the 99/5/EEC directives, including the following safety and EMC standards:

- EN300328-2
- EN301489-1/-17
- EN60950

CE Marking Warning

This is a Class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.